



### Step 1 - Install wall bracket and lamp frame to wall

Using suitable wall anchors, fix the lamp frame and wall bracket to the wall. The light must be mounted in the downward orientation for outdoor use. Please ensure that the parts are installed in the orientation shown below.


Please feed the wires from the wall through the wall bracket cable pass and grommet on the lamp frame. Procced to terminate the wires in the strip terminal on the lamp frame.

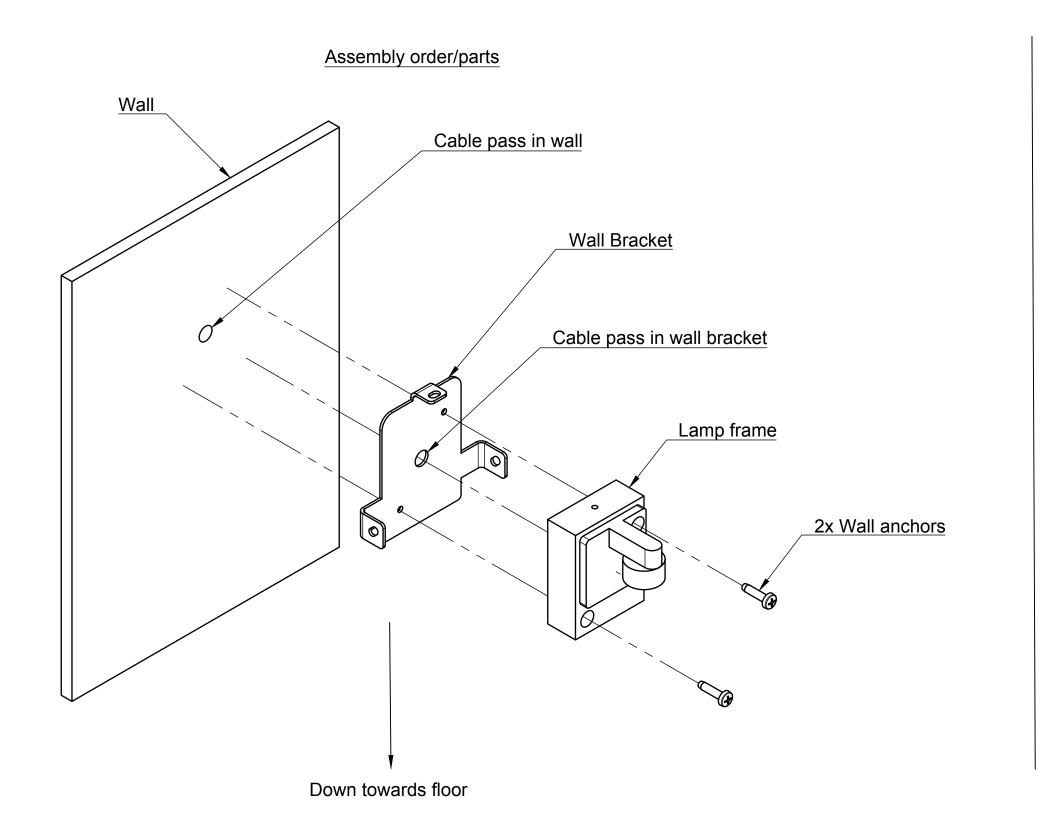

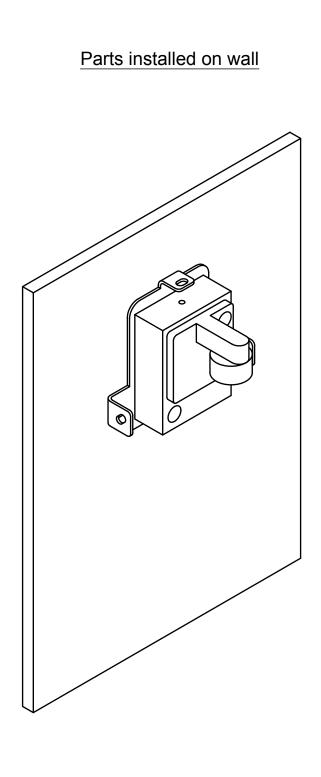


Step 2 - Install GU10 bulb into lamp frame

Install GU10 light bulb that is rated for the voltage in your installing country.

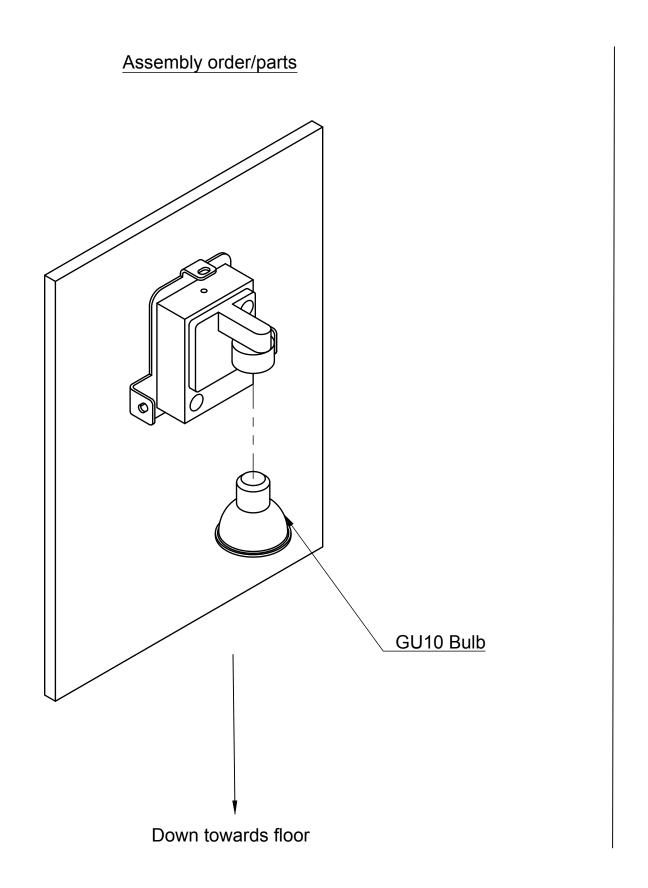


# Parts installed on wall

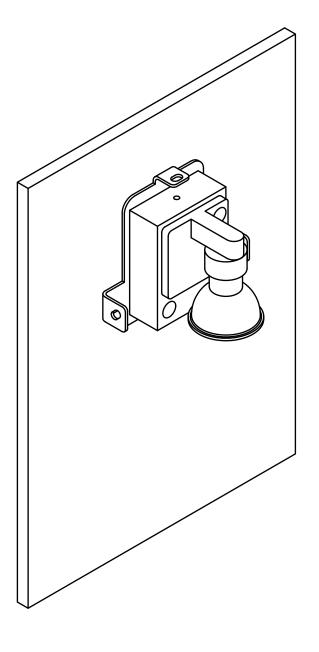


Step 3 - Install lamp housing onto lamp frame


Slide lamp housing onto the lamp frame installed onto the wall from step 1.

Secure the lamp housing to the lamp frame using the supplied lamp screws

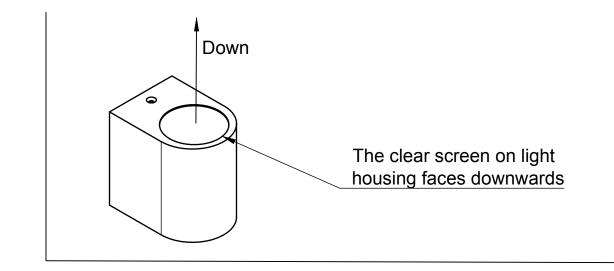

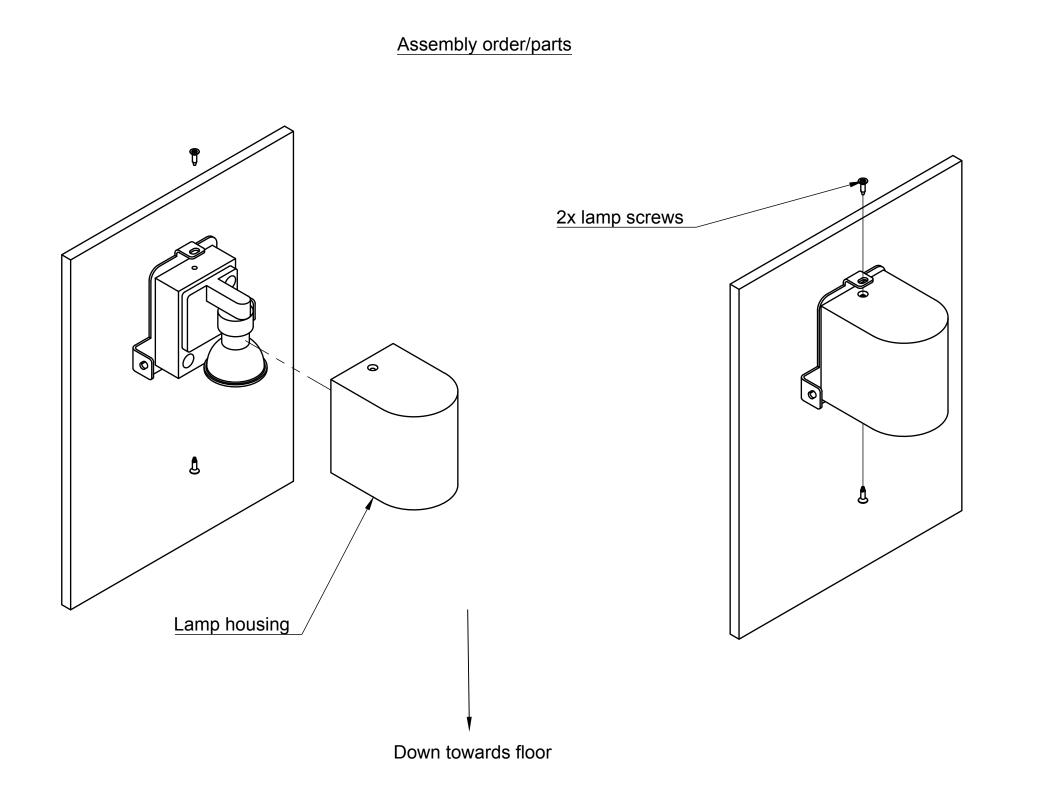




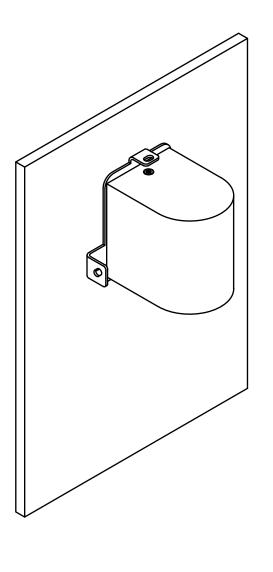

Step 4 - Install elbow shade onto wall bracket

Slide elbow shade over the wall bracket. Hold the elbow shade in place and install the 3 supplied grub/set screws. The grub/set screws will secure the shade to the wall bracket. Ensure the grub/set screws are fastened flush with the outside surface of the shade

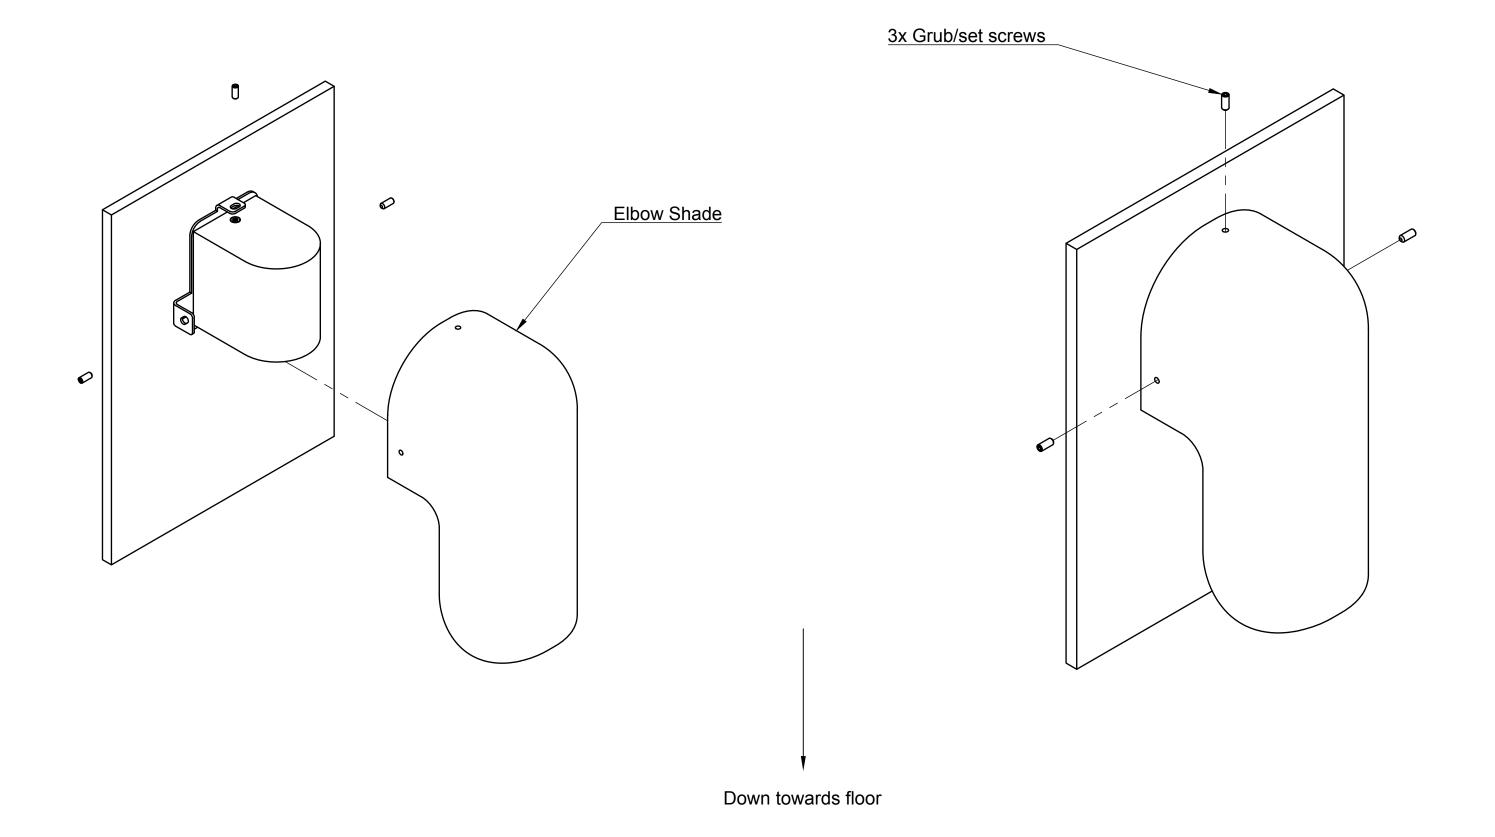

Step 5 - Install is complete

