

MDV PUSH PLATE INSTALLATION MANUAL

MDV PUSH PLATE - INSTALLATION MANUAL


SINGLE HANDLE INSTALLATION


PAGE 3 - 6

BACK TO BACK HANDLE INSTALLATION


PAGE 7 - 11



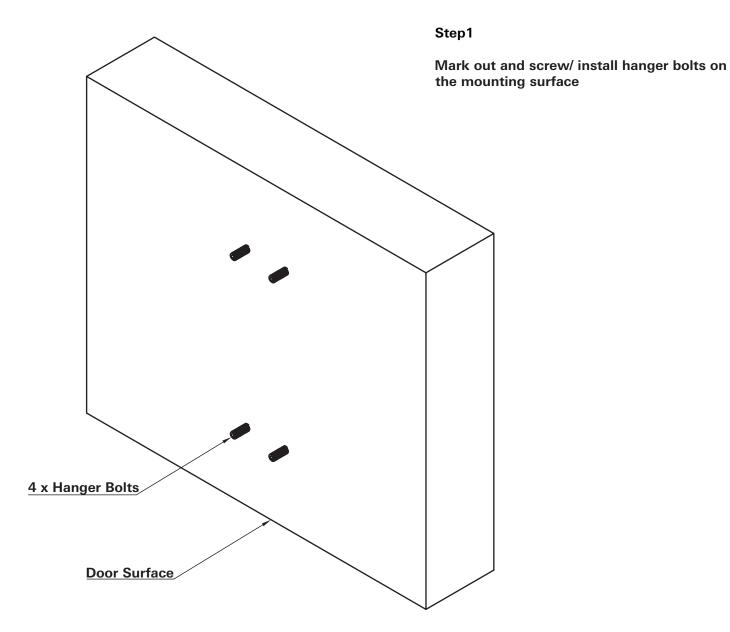

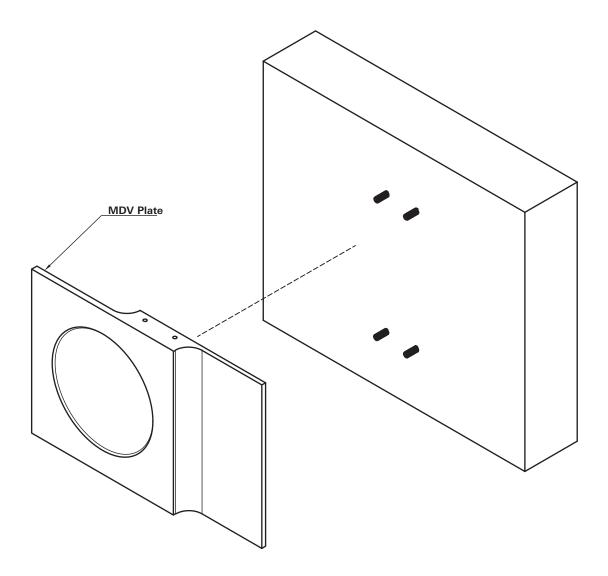

Step 2
Align and slide MDV plate onto hanger bolts (Installed in step 1)

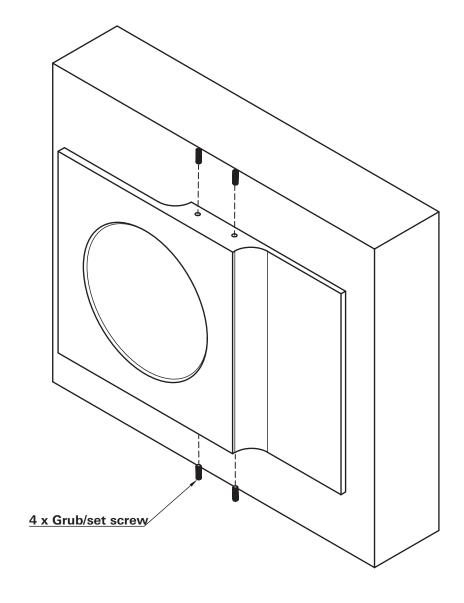

Step 3


Push MDV plate against door surface and tighten the 4 grub/set screws (Using supplied Allen/Hex key) to fix MDV plate in place


Please note:

If extra fixing strength is requried, apply silicone between the surfaces where the door meets the MDV plate.

Discuss with your builder if the added strength is required for your specific door


Complete

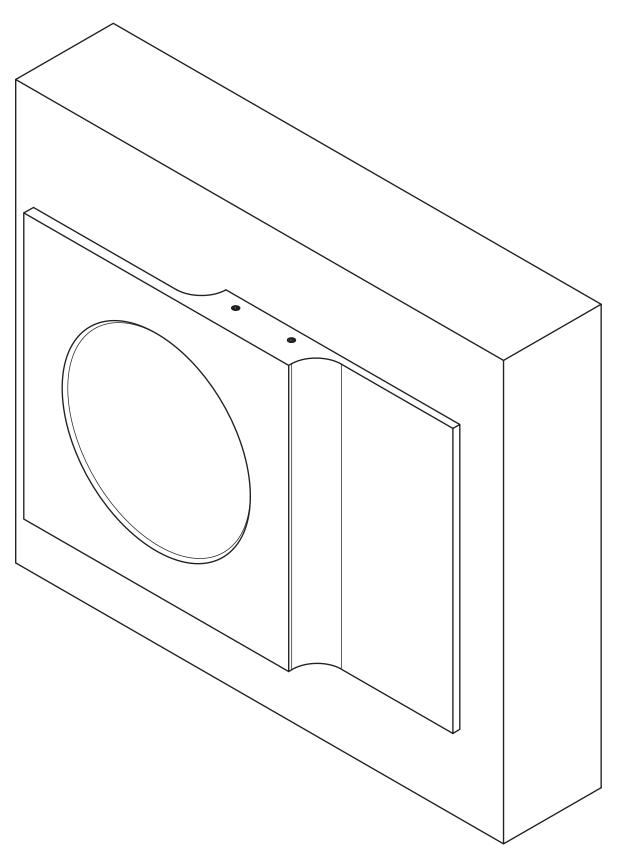

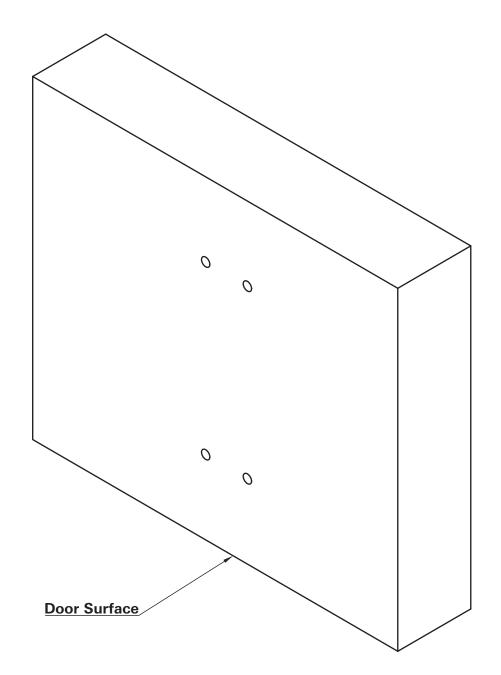

Step 1

Mark out and drill hole pattern for the 4x threaded rods

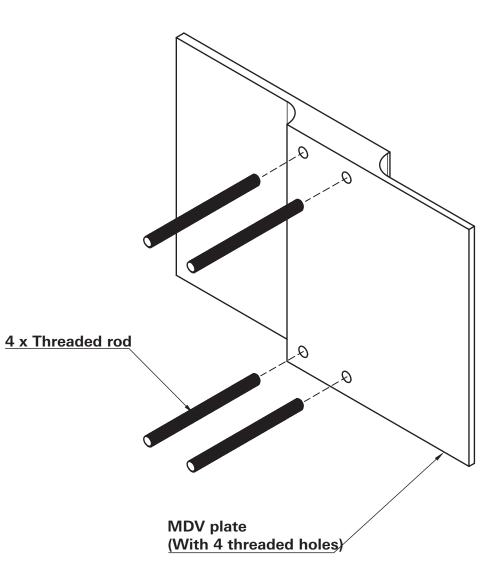



Step 2

Screw the threaded rod into the MDV plate with threaded holes

Please note:

It is recommended to use a thread locking compound to ensure that threaded rod is securely

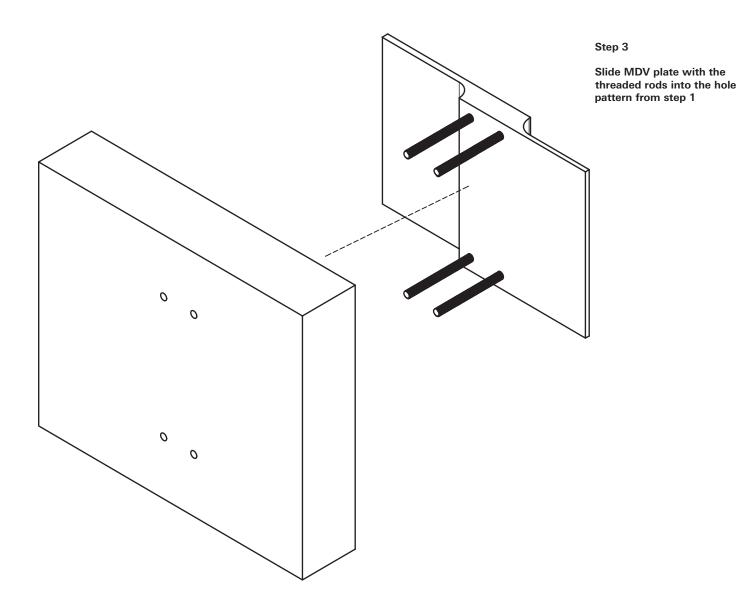

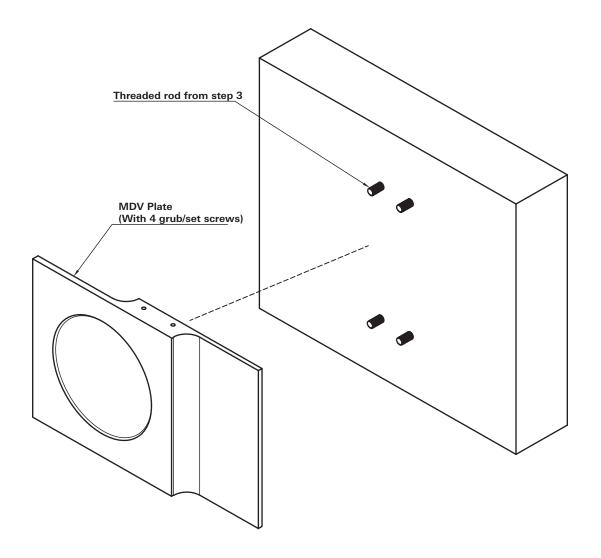


Step 4

Align and slide MDV plate with grub/set screws onto threaded rods.

Please note: Threaded rods may need to be cut down to suit the thicknes of your sepcific door.

Please test fit and cut to size so MDV plate sits flush againt door and has enough length for the grub/set screws to pinch onto the rod

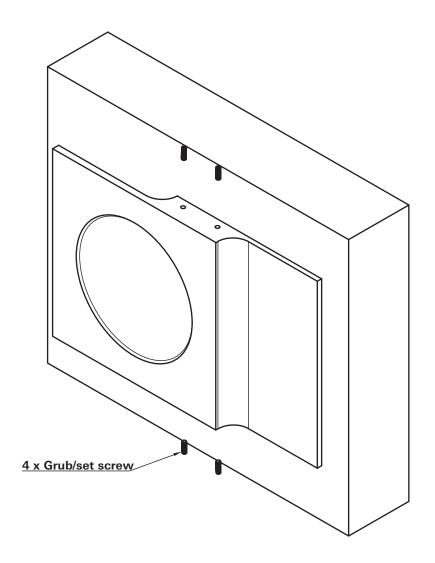

Step 5

Push MDV plate against door surface and tighten the 4 grub/set screws (using supplied Allen/Hex key) to fix MDV plate in place

Please note:

If extra fixing strength is required, apply silicone between the surfaces where the door meets the MDV plate.

Discuss with your builder if the added strength is required for your specific door